


TYPICAL VALVE / FITTING INSTALLATION

DRAWING SUBJECT TO
CHANGE WITHOUT NOTICE.
CONTACT SUMMIT WATER FOR
LATEST DETAILS.

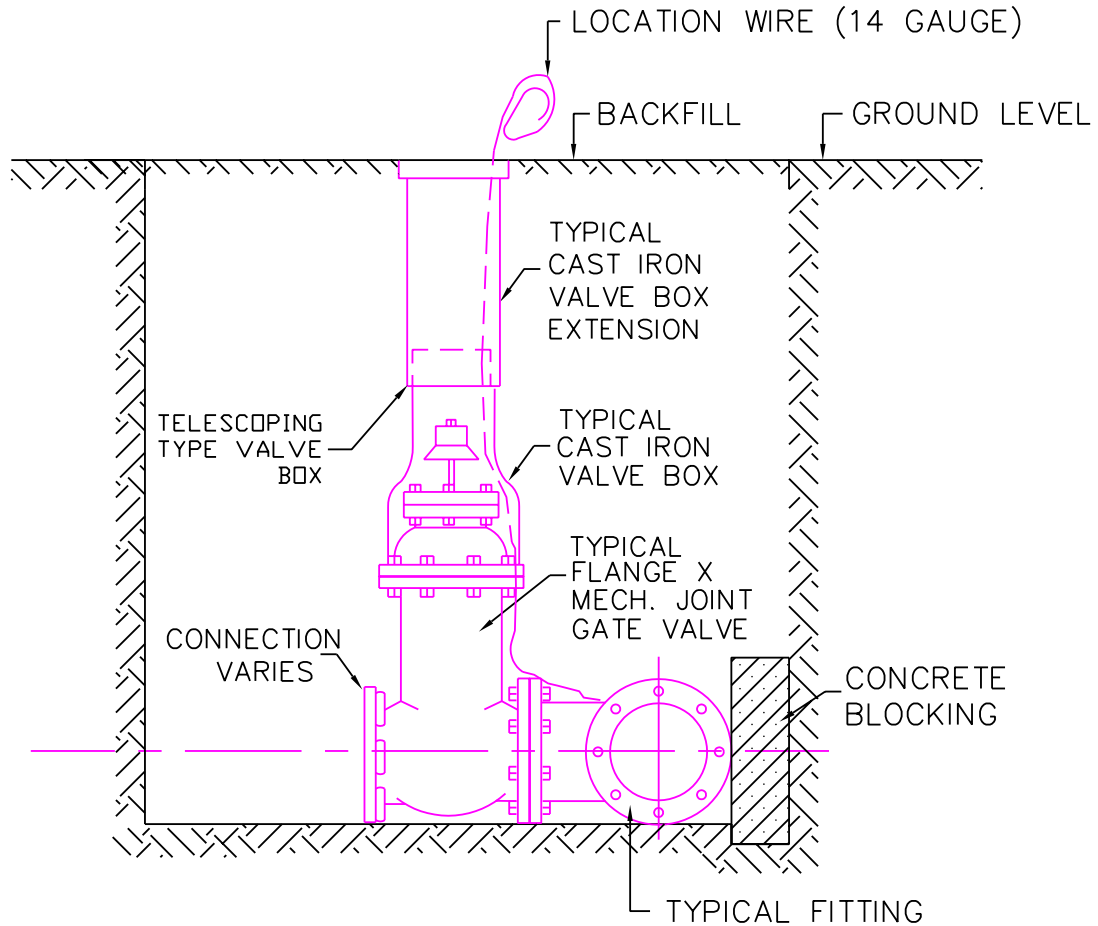

Specifications

1. All bolts to be protected from concrete blocking w/ plastic or other heavy fabric.
2. All blocking to be poured in place concrete 2,000 psi.
3. Valve boxes to have tabs turned in the direction of the water main installed on, and centered over operating nut on valve.
4. Valve boxes to be raised flush with asphalt & concrete surfaces and not more than 4" above finish grade elsewhere.
5. Locate wire to extend minimum of 12" beyond top of valve box.